

10,000 MILE INTERVAL VEHICLE MAINTENANCE SCHEDULE LIGHT-MEDIUM DUTY DIESEL

SEE BACK FOR MORE ITEMS

ATTENTION: MAINTENANCE AND REPAIR SERVICE PROVIDER
 CONTACT STATE OF UTAH FLEET OPERATIONS AT 855-FLT-UTAH (855-358-8824)
 PRIOR TO WORKING ON STATE OF UTAH FLEET VEHICLES. **ALL SERVICES MUST BE PREAUTHORIZED,**
 YOU MUST HAVE THE VEHICLE ID, MILEAGE, AND DETAILED PARTS AND LABOR PRICING WHEN CALLING.

MILEAGE	Change oil and oil filter Reset oil life monitor (manufacturer recommended oil, weight & type)	Lubricate chassis, steering, suspension and driveline (grease all zerks)	Check belts, hoses and fill all fluid levels (including DEF)	Drain fuel filter/water separator	Rotate tires and adjust air pressure	Check brakes	Inspect engine air filter restriction gauge and replace filter	Replace external fuel filters (diesel & gas when light appears or every 20,000 miles)
10,000	X	X	X	X	X	X	X	
20,000	X	X	X	X	X	X	X	X
30,000	X	X	X	X	X	X	X	
40,000	X	X	X	X	X	X	X	X
50,000	X	X	X	X	X	X	X	
60,000	X	X	X	X	X	X	X	X
70,000	X	X	X	X	X	X	X	
80,000	X	X	X	X	X	X	X	X
90,000	X	X	X	X	X	X	X	
100,000	X	X	X	X	X	X	X	X
110,000	X	X	X	X	X	X	X	
120,000	X	X	X	X	X	X	X	X
130,000	X	X	X	X	X	X	X	
140,000	X	X	X	X	X	X	X	X
150,000	X	X	X	X	X	X	X	
160,000	X	X	X	X	X	X	X	X
170,000	X	X	X	X	X	X	X	
180,000	X	X	X	X	X	X	X	X
190,000	X	X	X	X	X	X	X	
200,000	X	X	X	X	X	X	X	X

10,000 MILE INTERVAL VEHICLE MAINTENANCE SCHEDULE LIGHT-MEDIUM DUTY DIESEL

SEE BACK FOR MORE ITEMS

MILEAGE	Replace cabin air filter (if equipped)	Replace front and rear differential fluid (Ram trucks only)	Replace transfer case fluid	Transmission Service (no transmission fluid flushing)	Coolant replacement
10,000					
20,000					
30,000	X				
40,000					
50,000					
60,000	X	X	X	X	X
70,000					
80,000					
90,000	X				
100,000					
110,000					
120,000	X	X	X	X	X
130,000					
140,000					
150,000	X				
160,000					
170,000					
180,000	X	X	X	X	X
190,000					
200,000					